Primare Prisma 15 Series Chromecast built-in Quick Start Guide

The instructions below will allow you to quickly and easily connect your Primare Prisma 15 Series product to your network and mobile device in order to cast from hundreds of music streaming services with Chromecast built-In.


Prisma product network name (SSID): Chromecast built-in serial number:



Install your Primare Prisma product in your system following the instructions in the user guide, and turn your system on to begin the setup process.



Enable Bluetooth and WiFi on your mobile device. Connect the mobile device to the network you want the Prisma device to use.

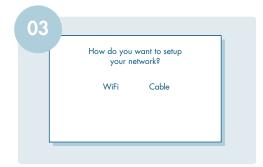


The first time you start up a 15 Series Prisma product you will be prompted on the front display to select either WiFi or Cable connection.



Download and open the Google Home app on your mobile device. On the app's home page you will see a **Device setup** field for any Prisma products to be setup.



Select the Prisma product you want to configure by pressing **Set Up**.

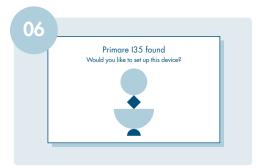

The Google Home app will automatically connect your mobile device to your Primare Prisma Product.



Once connected you will hear a test tone and see the graphic above on your mobile device.



You then choose a location or name for the device by either selecting a room name or by using the "adding a custom room" function at the bottom of the page.










WiFi connection only – Select the WiFi network you wish to connect to and push connect.



WiFi connection only – It will take some time to connect to your chosen WiFi network. During this time an animated graphic will be in motion, indicating that the process is underway.

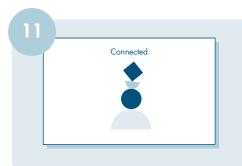

Once you are connected to the WiFi network, the graphic will assemble into a stable image.



At this stage you will have the opportunity to link your Primare Prisma product to your Google account, should you have one, to personalize your experience.



Almost done! – Review what you have done so far. And upon pressing next at the bottom of the screen you should see that your device is setup and ready.



The next steps will provide you with a tutorial to show you how to use Chromecast or you can press "Skip tutorial" to begin casting.



Select a music streaming app or a song from your mobile device, and press the Chromecast icon to start streaming.

Should you have any questions or require further information, please contact us at info@primare.net